


## BOILER FILLING INSTRUCTIONS

1. Loosen screw by chimney located under canopy
2. Disconnect generator drive band
3. Lift canopy and tilt generator plate

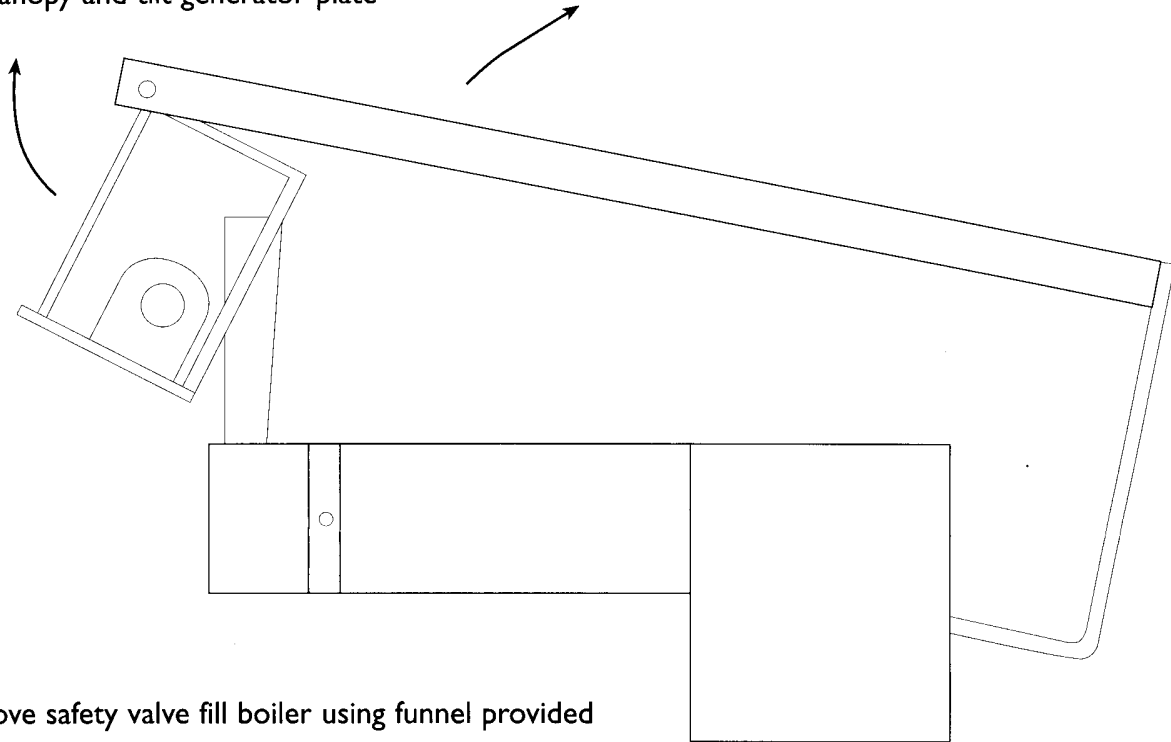

4. Remove safety valve fill boiler using funnel provided
5. Swing canopy and generator plate back into position
6. Ensure rivet protruding from bottom of generator plate engages with hole top of smoke box
7. Canopy screw should be finger tight. Over tightening may result in the chimney loosening
8. Connect drive band

THIS ENGINE SHOULD ALWAYS BE RUN CONNECTED TO EITHER THE GENERATOR OR THE REAR WHEELS OR BOTH.

### IMPORTANT

IF THE ENGINE IS RUN WITH GENERATOR AND REAR WHEELS CONNECTED IT IS RECOMMENDED THAT FOUR FUEL PELLETS ARE USED IN THE FIRE TRAY.

CARE SHOULD BE TAKEN WHEN HANDLING MODEL AS LED / FITTINGS ARE FRAGILE.